



Motorcycle • Snowmobile • Boat • ATV • Personal Watercraft


Congratulations on your purchase of Rally Pack Sport Bike Luggage. Assembled to your sport bike, it will provide extra storage for short or long trips. Please carefully read the information below before installation.

⚠ WARNING

The saddlebags must be installed so as not to interfere with rear wheel or suspension components. Failure to assure adequate clearance will result in serious injury. Obstructing side reflectors is not recommended.

Saddlebag Assembly Instructions

1. Open saddlebag and remove contents.
2. Locate bottom bag support.
Note: Support has velcro on bottom side that must match velcro in bag. It is not in the center.
3. Bend support as shown. Plastic and velcro strip will be on the bottom.

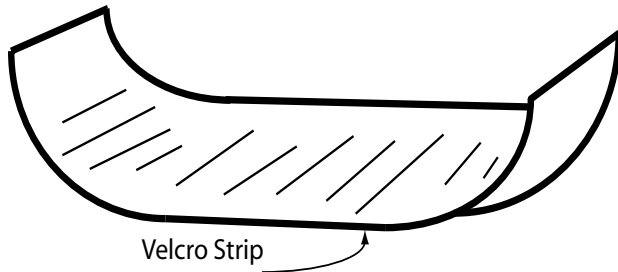

4. Insert support into pocket inside the front of the bag. If support is all the way in pocket, velcro strips will match. **DO NOT** attach velcro at this time.
5. Insert support into rear pocket inside bag. It will be necessary to slightly bend support up to fit.
6. Press velcro strips to mate. Smooth out any wrinkles.
7. Determine location of exhaust pipe.
 - A. If tail pipe is under tail section of bike - place silver side of protective heat shield to fender. Weave velcro straps from saddlebags through webbing on black side of protective pad. Fasten.
 - B. If tail pipe is on side of tail section - place silver side of protective heat shield toward saddle bag. This will protect fender from any rubbing that may occur. Weave velcro straps from saddlebags through webbing on Silver side of protective pad. Fasten.

Rally® Pack Value/Deluxe Series Sport Bike Saddlebag and Tail Bag Instructions

Installation

1. Place Saddlebags over fender. Loosen velcro straps so the bags hang freely from the fender without tipping either to far outward or inward. Place top part of protective pad against tail section.
2. Locate loop straps and secure around suitable frame member. Connect to buckles on front of saddlebags.
3. Position rear strap under license plate bracket or around fender. An additional strap has been provided for bikes with license plate brackets that are not readily accessible.
4. Tighten side straps, then rear strap. Saddlebags should hang straight down. Readjust if necessary. Do not overtighten.
5. Saddlebags should be positioned a minimum of 1" above exhaust pipe. Although the bottom of the saddlebag contains an aluminized heat shield, care should be taken to ensure adequate air flow under the saddlebag to reduce exposure to heat extremes.

⚠ CAUTION

If your side reflector is obstructed, you must reposition it. The reflective side striping on your saddlebags will not replace the factory striping for visibility.

Tail Bag Installation

1. Place Tail Bag on tail section of bike with carrying handle facing to the rear.
2. Exterior side compartments have front and rear straps. Extend forward strap on both sides. (Rear strap is used for attachment to saddlebag)
3. Remove 2 loop straps from interior of bag.
4. Secure straps to suitable frame member.
5. Connect straps to buckles on bag.
6. Install rear strap around tail section of bike and snap to bag.
7. Adjust straps to create a snug fit on bike. Do not overtighten.

Attaching Tail Bag to Saddlebags

1. Install saddlebags on bike per instructions.
2. Place Tail Bag on tail section of bike with handle toward the rear.
3. Position rear strap under license plate bracket or around fender. Attach buckle.
4. Open exterior side compartments and extend both buckles on each side.
5. Insert 4 buckles from Tail Bag into matching buckles on saddlebag.
6. Adjust rear strap for snug fit to bike. Do not overtighten.

Care & Cleaning:

Use a mild detergent and soft brush to remove dirt or road grime from the bags. Rinse thoroughly and dry before using. Do not put in washer or dryer. Dry-cleaning is not recommended.

Note: Your bags are manufactured from heavy-weight waterproof polyester materials.

However, in the event of heavy rain, moisture may enter the bags through seams or zippers.

It is highly recommended that important papers, valuable items, or clothing be wrapped in plastic for added protection.

WARNING

Overloading any saddlebag will result in a high center of gravity, causing bike to become top heavy and susceptible to unexpected tipping on lean-in while negotiating high speed turns. **SADDLEBAGS MUST BE LOADED EVENLY SIDE-TO-SIDE. MAXIMUM ALLOWABLE LOAD LIMIT IS 7 LBS.**